

Deadman Handle

RM 21A Deadman Handle

(Complete handle includes items 1-6)

Item	Part No.	Description
9	RCAMV 11	SLIDE VALVE
8	RCAMV 8	ELBOW
7	RCAMV 10	TEE
6	RM 27	HANDLE SPRING
5	RM 25C	HANDLE BLADE
4	RM 41	EXTERNAL CIRCLIP
3	RM 26A	HANDLE PIN
2	RM 22	RUBBER INSERT
1	RM 23	1/4" MALE/MALE ADAPTOR

RCAMV 6 Deadman Handle

(Complete handle including items 1-9)


Used in conjunction with
Remote Control Metering Valve

Installation Instructions

The RM 21A Deadman Handle is designed for use with Hodge Clemco blast machines incorporating a remote control system. These instructions must be used in conjunction with those contained in the blast machine Owner's Manual.

WARNING: Ensure compressed air supply is turned OFF and disconnected prior to fitting.

1. Remove existing deadman handle & securely fit the RM 21A to the blast hose adjacent to the nozzle holder using hose ties.
2. Securely connect the 1/4" 'red' supply control hose to port R on the rear of the RM21A & the 1/4" 'yellow' signal hose to port Y.
3. Using tape or hose ties secure the control hoses to the blast hose at metre intervals to prevent snagging.
4. Check rubber insert is in good condition & correctly positioned.
5. Check handle lever operates freely.
6. Follow normal operating procedures in blast machine Owner's Manual.

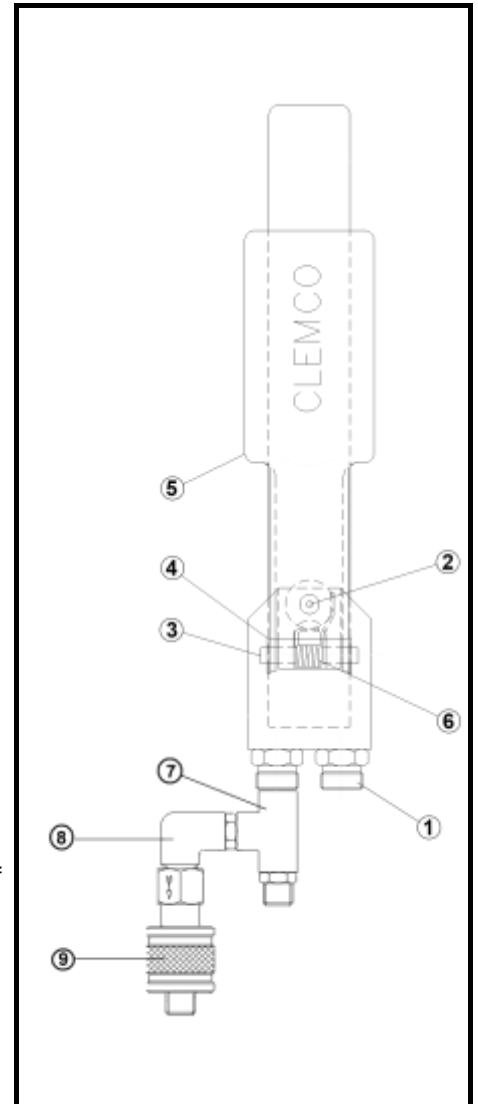

Hodge Clemco Ltd. Surface Treatment & Finishing Equipment

Portable Abrasive Blast Cleaning Equipment
JBlast Expendable Abrasive
Closed Circuit Blast Cleaning Systems
Hand Blast Cabinets
Recyclable Abrasives
Vacuum and Mechanical Recovery Systems
Pipe Internal Cleaning & Coating Equipment

Blastrooms
Spraybooths
Filter Media
Airless/Air Assisted Spray Coating Equipment
Servicing
Approved Training Courses

Hodge Clemco Ltd. Orgreave Drive, Sheffield, South Yorkshire. S13 9NR

Tel: 0114 254 0600
www.hodgeclemco.co.uk email: hc.sales@surfaceprep.com